 
 


Specifications:  
 45 x 35mm  
 Four button operation  
 5ATM Water proof  
 Electroluminescent (EL) Backlight  
 Mineral crystal lens

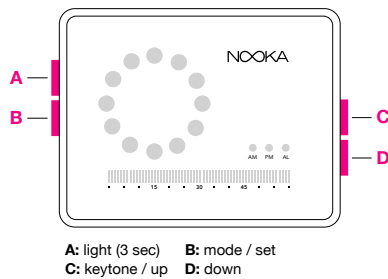


### basic display modes: press B button to change mode


**time mode:**  
 4:46 am

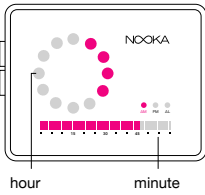

**date mode:**  
 august 21st

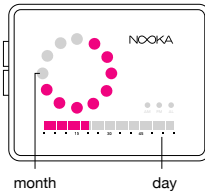


**alarm mode:**  
 alarm set at 7:30 am

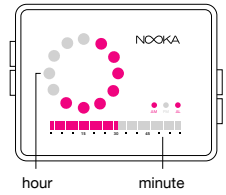

Whole screen flashing in Alarm mode

### time mode: how do i set time?

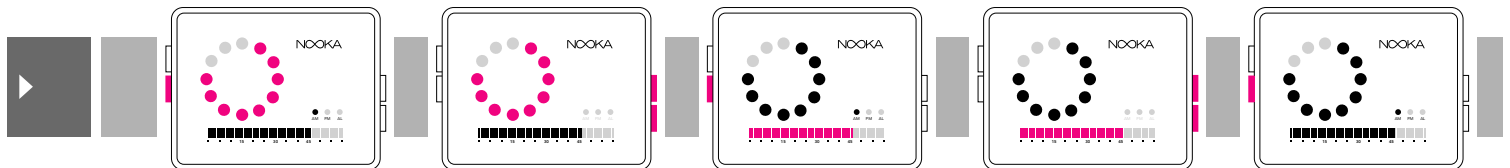

**Step 1:**  
 Press B and hold until the hours blink.


**Step 2:**  
 Set the hour with C (+1 hour) or D (-1 hour)

**Step 3:**  
 Press B and the minutes blink

**Step 4:**  
 Set the minute with C (+1 minute) or D (-1 minute)

**Step 5:**  
 Press and hold B to confirm values and exit setting

### date mode: how do i set date?

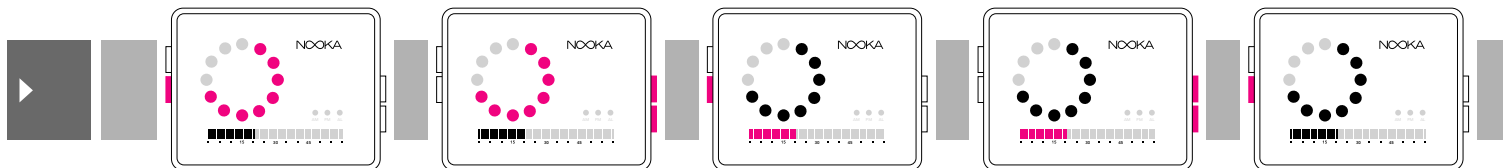

**Step 1:**  
 Press B and hold until the month blink.


**Step 2:**  
 Set the month with C (+1 hour) or D (-1 hour)

**Step 3:**  
 Press B and the days blink

**Step 4:**  
 Set the day with C (+1 minute) or D (-1 minute)

**Step 5:**  
 Press and hold B to confirm values and exit setting

### alarm mode: how do i set alarm?

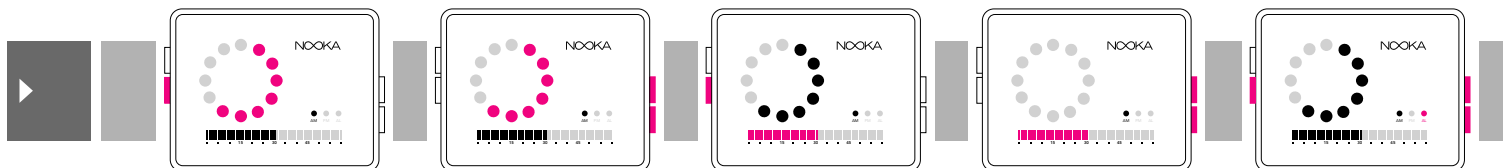

**Step 1:**  
 Press B and hold until only the hours blink.

**Step 2:**  
 Set the hour with C (+1 hour) or D (-1 hour)

**Step 3:**  
 Press B and the minutes blink

**Step 4:**  
 Set the minute with C (+1 minute) or D (-1 minute)

**Step 5:**  
 Press B to confirm  
 Press D or C to toggle alarm On or Off  
 AL-Window shows On / Off

## NOOKA®

NOOKA INC.  
 16 West 36th Street Suite 1302  
 New York, NY 10018  
 www.nooka.com

© 2007 Nooka Inc. All Rights Reserved. "Nooka" is a registered trademark, and the Nooka logo and "Zirc" are trademarks, of Nooka Inc. Designs are protected by US Patents.  
 US Design Patents: Des.545,2315.

### Nooka 90 day Warranty

All watches come with a warranty against manufacturer defect or failure for a period of 90 days from the date of purchase. This warranty covers replacement or repair of the product, which is determined by availability, and the time of purchase. Replacement is often used within 30 days after purchase with the same product or like product when repair service is unavailable.

Please note: Watch bands and batteries are NOT covered by this warranty unless defective. Proof of purchase is required.

### For Service

First, contact the retailer from where your watch was purchased, as it may be covered under their return/repair policy. If your watch is not covered by the retailer and is still within our direct warranty, please contact us at: [service@nooka.com](mailto:service@nooka.com) to obtain an RMA number and address to send defective merchandise. Service outside of the warranty period is provided with a small parts and labor charge, please inquire.

Function and specs are subject to change, please check for latest instruction book updates on [www.nooka.com/service](http://www.nooka.com/service)



### The Nooka Story

Nooka is the brainchild of artist and designer, Matthew Waldman. He conceived the idea for Nooka after staring at a large wall clock in a London hotel and wondering why there are so few options for time display. He then sketched his ideas for potential designs on a napkin and brought them back to New York. After working on the designs, he submitted them to his legal team, and indeed, they were unique enough to patent!

The linear and graphic representation of time with Nooka watches presents a more intuitive way to view time. The visual mass increases as time passes, giving weight to an ephemeral and abstract concept. Once you're used to the new visual paradigm, you may never go back to standard analog and digital time displays for your wrist.